


Zone Indicator Control System

with Extensions Assembly 1/2" to 2-1/2"

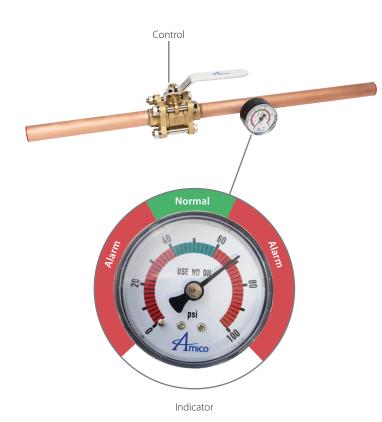

Features:

- Pressure Alarm Indicator
- · High/Low Alarm set point
- 100% Pressure tested
- Cleaned for oxygen service
- Available in sizes 1/2" to 2-1/2"
- · Available in locking or non-locking

General Specifications:

Zone Indicator Control System shall consist of an alarm display for the zone and a control function.

The Zone Indicator Control System shall be 3 piece ball-type design with a brass forging body and a chrome-plated brass ball for sizes 1/2" to 2-1/2" (1.3 cm - 6.3 cm). Ball seats, stem seals and stem washer shall be Reinforced Teflon (PTFE), with Viton stem and flange O-rings. A blow-out proof stem shall be used and the zone indicator shall have a maximum pressure rating of 600 psi (4,137 kPa).

The display shall indicate the status, RED for alarm condition

and GREEN for normal condition.

The Zone Indicator Control System shall be operated by a lever-type handle requiring only a quarter turn to control the zone.

Zone indicators shall be equipped with a type "K", full port copper pipe stub extensions at both the inlet and outlet sides of the zone indicator port to facilitate installation.


Zone Indicators shall be designed in such a manner that it can be "swung out" during installation so as to prevent damage due to heat transfer during the brazing operation.

Each Zone Indicator assembly shall be washed and degreased for medical gas service. Pipe stub extensions shall be capped at both ends. The zone indicator shall be supplied in a sealed plastic bag to prevent contamination prior to installation.

Amico products comply with NFPA 99 and CSA Z7396.1.

| Р | rc | וכ | e | C | t |
|---|----|-----|---------------|---|---|
| _ | | - 1 | $\overline{}$ | _ | _ |

Technical Specifications

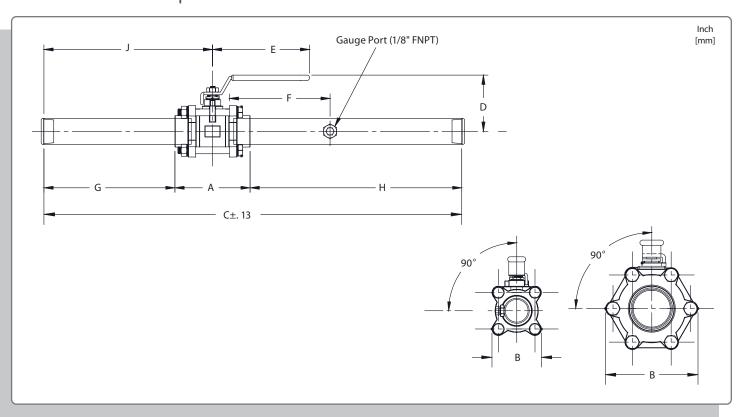

Model Numbers

| Model # | Size | А | В | С | D | Е | F | G | Н | J | Bolts |
|-------------|---------------|-------------------|------------------|-------------------|-------------------|-------------------|---------------|--------------------|--------------------|--------------------|-------|
| ZI-ISO-G-05 | 1/2 (13) | 2-63/100 (67) | 1-39/50 (45) | 21 (533) | 1-69/100 (43) | 3-17/50 (85) | 4 (102) | 6-59/100 (167) | 11-3/4 (299) | 7-9/10 (201) | 4 |
| ZI-ISO-G-07 | 3/4 (19) | 2-47/50 (75) | 2 (51) | 21 (533) | 2 (51) | 4-17/50 (110) | 4 (102) | 6-14/25 (167) | 11-1/2 (292) | 8-3/100 (204) | 4 |
| ZI-ISO-G-10 | 1 (25) | 3-4/9 (87) | 2-1/4 (57) | 21 (533) | 2-4/25 (55) | 4-17/50 (110) | 4 (102) | 6-9/32 (159) | 11-1/4 (286) | 8 (203) | 4 |
| ZI-ISO-G-12 | 1-1/4 (32) | 3-97/100 (101) | 2-18/25 (69) | 21 (533) | 2-69/100 (68) | 5-13/100 (130) | 4 (102) | 5-3/4 (146) | 11-1/4 (286) | 7-7/10 (196) | 4 |
| ZI-ISO-G-15 | 1-1/2 (38) | 4-4/9 (113) | 3-3/100 (77) | 21 (533) | 2-8/9 (73) | 5-13/100 (130) | 4 (102) | 5-41/100 (137) | 11-13/100 (283) | 7-3/5 (193) | 4 |
| ZI-ISO-G-20 | 2 (51) | 5-14/25 (141) | 3-69/100 (94) | 19-47/50 (506) | 3-17/50 (85) | 6-31/100 (160) | 2-8/9 (73) | 5-1/4 (133) | 9-13/100 (232) | 8-1/50 (204) | 4 |
| ZI-ISO-G-25 | 2-1/2 (64) | 6-47/64 (171) | 4-23/25 (125) | 30-3/4 (781) | 4-29/100 (109) | 9-1/20 (230) | 4 (102) | 12-21/100 (310) | 11-81/100 (300) | 15-57/100 (396) | 6 |

^{*}Measurements: inches (millimeters)

NOTE:

- 1. A plug is provided. The indicator can be replaced with the plug for applications where the indicator is not needed.
- 2. To order with locking device, add the letter "L" after the current "G" to any part number. For example: ZI-ISO-GL-XX.

Distributed By:

Amico Corporation | 85 Fulton Way, Richmond Hill, ON L4B 2N4, Canada | 600 Prime Place, Hauppauge, NY 11788, USA Toll Free Tel: 1.877.462.6426 | Toll Free Fax: 1.866.440.4986 | Tel: 905.764.0800 | Fax: 905.764.0862 | www.amico.com